

**This product may be purchased from Connevens Limited secure online store
at www.DeafEquipment.co.uk**



DeafEquipment.co.uk

Solutions to improve the quality of life





CL1100

**AMPLIFIED DESK TELEPHONE
WITH VOLUME AND TONE CONTROL**

**TELEPHONE MULTIFONCTIONS AVEC REGLAGE DU
VOLUME ET DE LA TONALITE**

User guide / Notice d'utilisation



E

CAUTION: THIS TELEPHONE PRODUCT IS SPECIFICALLY DESIGNED FOR PEOPLE WITH HEARING DIFFICULTIES AND IS PROVIDED WITH A HANDSET EARPIECE VOLUME CONTROL FOR INDIVIDUAL REQUIREMENTS. DUE CARE MUST BE TAKEN BY ALL USERS THAT THE HANDSET EARPIECE VOLUME CONTROL IS SET TO THE LOWEST LEVEL ACCEPTABLE BY EACH RESPECTIVE USER. CARE SHOULD THEREFORE BE EXERCISED TO ENSURE THAT ANY NAIVE USERS ARE FAMILIAR WITH THIS REQUIREMENT.

F

ATTENTION: CE TELEPHONE PEUT ETRE DESTINE AUX PERSONNES AYANT DES PROBLEMES D'AUDITION. IL POSSEDE UN ECOUTEUR A VOLUME VARIABLE. A LA PREMIERE UTILISATION, ASSUREZ VOUS QUE LE BOUTON DE REGLAGE DU VOLUME SOIT POSITIONNE SUR LA POSITION VOLUME MINIMUM. LES PERSONNES MALENTENDANTES POURRONT PAR LA SUITE AUGMENTER LE VOLUME POUR L'ADAPTER A LEUR AUDITION.

E**INDEX**

Description	4
Setting up	
- Connecting the telephone	6
- Ringer settings	6
- Dialling types and grounding (UK version)	8
- Time break recall switch	9
Volume and tone adjustment	
- Receiving volume and tone	10
- Sending volume level adjustment	11
Using the phone	
- Answering incoming call	12
- Making a call	12
- Last number redial	12
- Recall, * & # buttons	13
- Mute button	13
- Storing telephone numbers	13
- Dialling stored number	14
Guarantee	15

F**SOMMAIRE**

 
Description	16
Installation	
- Raccordements	18
- Réglage de la sonnerie	19
- Fréquence décimale/vocale (Interrupteur Terre/Pulse/Tone) Option pour l'Angleterre	19
- Interrupteur 300ms/100ms	20
Réglage du volume et de la tonalité	
- Volume et tonalité de réception	21
- Réglage du volume d'émission	22
Utilisation	
- Recevoir un appel	23
- Appeler	23
- Rappel du dernier numéro	23
- Touches R, * & #	24
- Fonction secret	24
- Mémoriser un numéro de téléphone	24
- Appel d'un numéro en mémoire	25
Garantie	26

DESCRIPTION




4

DESCRIPTION

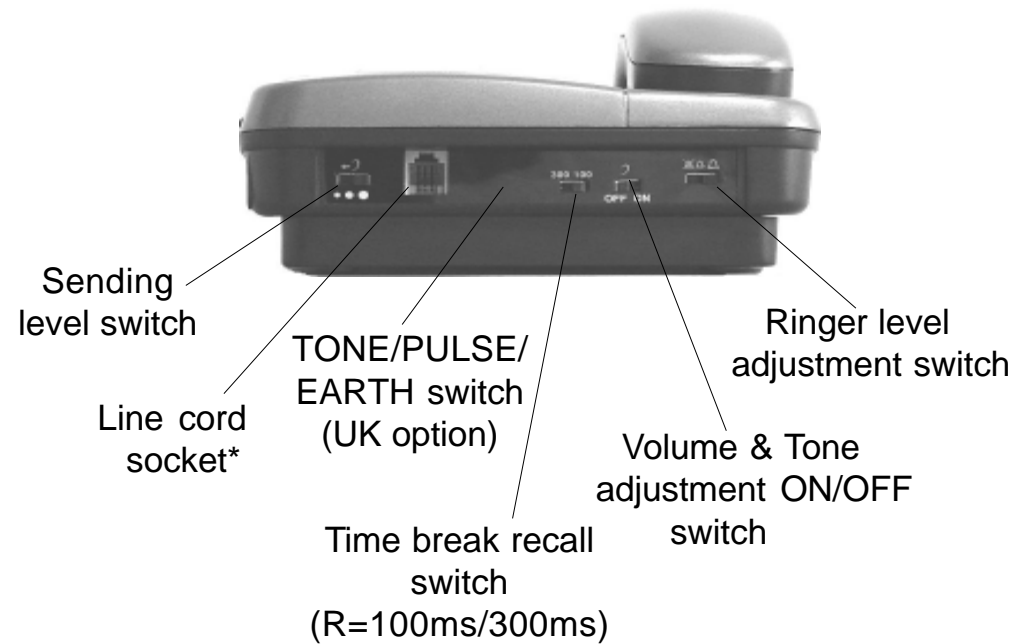

 (*) Classified TNV-3 according to EN60950 standard.

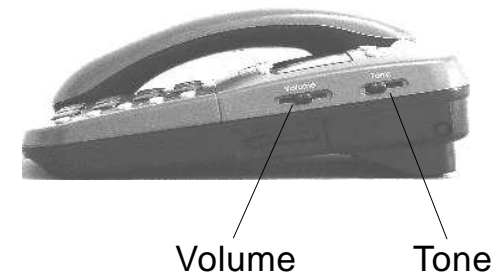

5

SETTING UP

1 - CONNECTING THE TELEPHONE

- 1 - Connect the handset cord.
- 2 - Open the battery compartment by pulling back the latch.
- 3 - Insert correctly 4 x AAA 1.5V alkaline batteries (not supplied) in the battery compartment (*). Batteries are required if you wish to increase the ringer level up to 10 dB.
- 4 - Snap the battery door back in place.
- 5 - Connect the line cord to the socket (*).

2 - RINGER SETTINGS

A switch located on the upper side allows the ringer to be switched HI,LOW,OFF:

-  : Off,
-  : Low,
-  : Hi


(*) Classified TNV-3 according to EN60950 standard.

SETTING UP

Your phone comes with the ringer switched to «High» and the melody set to «6»:

	Low	Mid	High
Melody 1	1	2	3
Melody 2	4	5	6 (by default)
Melody 3	7	8	9

If you don't like the ringer melody, you can choose a new one by changing the settings as per instructions below:

- Lift the handset.
- Press  button.
- Press # button.
- Press any of the 1 - 9 dial keys.

 
The new ringer settings will be activated with the next incoming call.

Note: The ringer level will be increased up to 10 dB if you insert batteries into the battery compartment.

SETTING UP

3 - DIALING TYPES AND GROUNDING

Switch ETR/PR/T is located on the upper side of english type models. If you wish to connect your CL1100 to a public UK/French switch-board (PBX), move switch ETR/PR/T to position 3 (T). This will ensure optimal compatibility of your phone with most (99%) PBX.

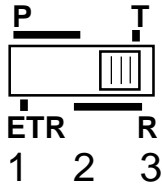

Positions:

Position 1:

Pulse dialing. The **R** is grounded. This option can be used only within the UK in very special cases.

Position 2:

Pulse dialing. The **R** is set according to the determined adjustment (see «Time Break Recall Setting for R Function» p.9).

Position 3:

Tone dialing. The **R** is set according to the determined adjustment (see «Time Break Recall Setting for R Function» p.9).

SETTING UP

If you are using your CL1100 with a hearing aid, set your hearing aid to “T” position.


4 -TIME BREAK RECALL SWITCH (300/100)


Check the Time Break Recall setting of your CL1400. For the UK the Time Break Recall should be set to 100 mS. It can be switched to 300 mS for other locations or PBX's.


10 TONE AND VOLUME ADJUSTMENT


1-RECEIVING VOLUME AND TONE ADJUSTMENT

You can adjust the receiving volume and tone according to your own hearing requirements.

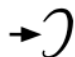The button  allows extra volume and tone functions to be activated or deactivated during the conversation.

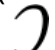
Tone and volume adjustment (15dB to 30dB) is only activated when the switch  located at the upper side of your phone is set to **ON**. When this button is set to **OFF** only the volume can be adjusted from 0dB to 15dB.

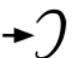When the function is activated, the red light of extra receiving and tone function button  is lit.

Note: When the tone (treble), earpiece volume and sending levels are set to the maximum, whistling may occur. If whistling occurs the sending level settings should be decreased with the switch .


11 TONE AND VOLUME ADJUSTMENT

 Adjust the **TONE** and **VOLUME** buttons to fit the levels to your own hearing requirements.

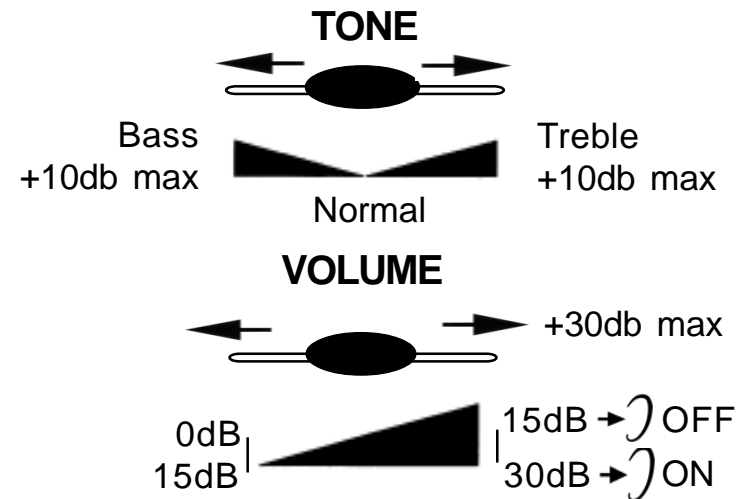

2-SENDING VOLUME LEVEL ADJUSTMENT

 If your voice is quiet or called parties have difficulty hearing you, you can increase the sending level volume with the switch located on the upper side. You can also decrease the sending volume if required.

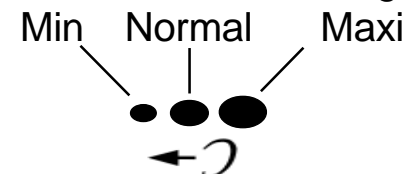

USING THE PHONE


1 - ANSWERING INCOMING CALLS

- When an incoming call is received the phone will ring and the incoming call indicator will flash. To answer the call lift the handset and speak.
- On completion of the call, carefully replace the handset in the cradle to release the line.

2 - MAKING A CALL

- Lift the handset.
- Await the dial tone and dial required number.
- On completion of the call, carefully replace the handset in the cradle.

3 - LAST NUMBER REDIAL



- Lift the handset.
- Await the dial tone and press  button.
- A previously dialled number will be automatically redialled (not in use for memory numbers).

USING THE PHONE

4 - RECALL, * & # BUTTONS

These are used with the new services provided on digital exchanges. For details please contact your network operator.

5 - MUTE BUTTON

If you wish to speak privately to someone else in the room without your caller overhearing, press and hold the  button. You will still be able to hear the callers but they cannot hear you during the mute operation. To resume normal conversation, release the  button.

6 - STORING TELEPHONE NUMBERS

Your telephone CL1100 can store 12 direct memories.

To store a number please follow instructions below:

- Lift the handset.
- Press  button.
- Press **M1**, **M2**, ... **M12** to locate the number.

USING THE PHONE

- Dial the number.
- Press again ↗ Button.

Numbers will be lost after few hours if you disconnect your phone. Entering a new number in the same location will automatically erase the previous number.

7 - DIALING STORED NUMBERS

- Lift the handset and await the dial tone

- Press the appropriate location button M1, M2... M12 and the number stored in this location will be dialed automatically.

To register your stored phone numbers, use the index located on the front of your phone. Use this table to prepare your phone book.

	1	
	2	
	3	
	4	
	5	
	6	
	7	
	8	
	9	

Example:

Pierre	1	01 64 57
--------	---	----------------

GUARANTEE

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of one year. During this time, all repairs or replacements (at our option) are free of charge. Should you experience a problem then contact our helpline or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorised Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM

Please note: The guarantee applies to the United Kingdom only.

Declaration : Hereby Geemarc Telecom SA declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EEC and in particular article 3 section 1a, 1b and section 3.

Telephone connection : Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN60950 standard.

The telephone does not operate if the line current is lower than 18 mA.



For product support and help visit our website

at www.geemarc.com
telephone 01707 384438
or fax 01707 372529