



Connevens.info

Solutions to improve the quality of life

*Offering you choice
Helping you choose*

This product may be purchased from Connevens Limited
secure online store at www.DeafEquipment.co.uk


DeafEquipment.co.uk



Doro Magna 4000

English



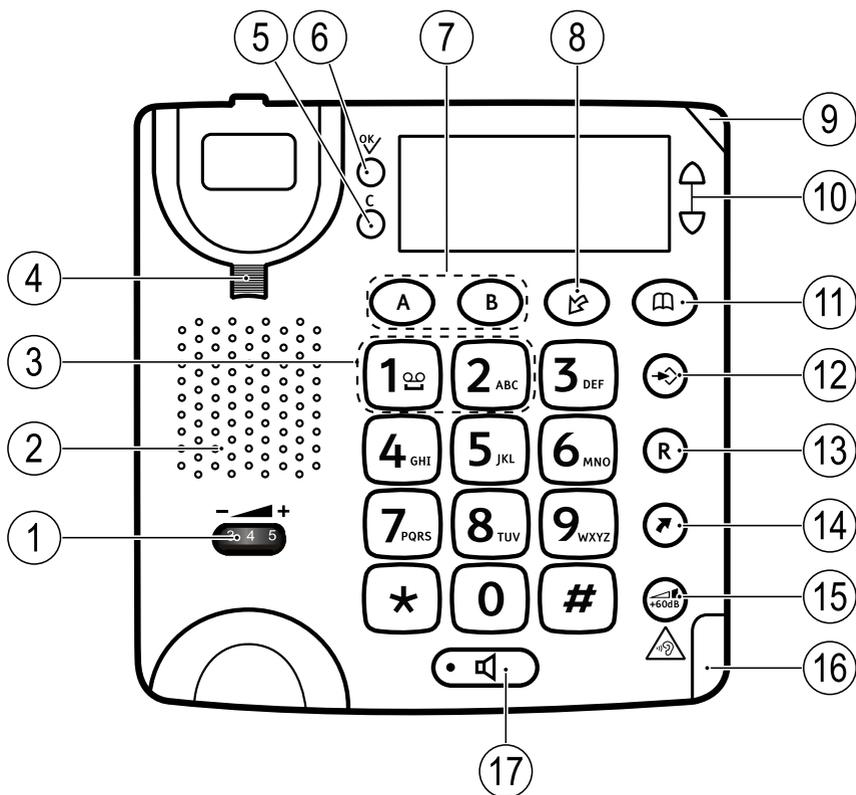

English

- | | |
|--|-----------------------------------|
| 1. Handset volume control | 10. Up/Down |
| 2. Speaker | 11. Phonebook |
| 3. Service access keys | 12. Menu |
| 4. Hanging peg for handset | 13. Recall |
| 5. Clear | 14. Redial |
| 6. OK | 15. Extra amplification (boost) |
| 7. Speed dial keys | 16. Amplifier on/ringer indicator |
| 8. Caller ID (access received numbers) | 17. Speaker on |
| 9. New call indicator | |

Installation

This device is intended for the analogue telephone network lines in AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SI, SK, SE.

Connection

1. Connect the curly cord to the handset and to the socket marked  on the unit.
2. Connect the mains adapter to an electrical wall socket and then to the socket marked **DC 12V** on the unit.
3. Connect the telephone line cord to a network wall socket and then to the socket marked  on the unit.
4. Lift the handset and listen for the dial tone.

Note! Use supplied telephone line cord, an existing cord from a previous phone may not be compatible.

Setup

The setup menu is opened directly after plugged into the mains. The phone will return to standby mode after 60 seconds of inactivity or when pressing . Confirm with  and the next setting is displayed. Scroll with . Access the setup menu at any time with .

1. Press .
2. **ENGLISH** is displayed.
3. Select desired language using . Press .
4. Select desired contrast setting (**LCD CONTRAST**, 2=normal) using . Press .
5. Select desired hour (00-23) using . Press .
6. Select desired minute using . Press .
7. Select desired day using . Press .
8. Select desired month using . Press .
9. Select **TONE** or **PULSE** using . Press .

Note! If unsure of which mode to use, select TONE as this works in most locations.

10. Select **FLASH TIME** using  (**100** for EU/GB/AUS, **270** France/Portugal and **600** New Zealand). Press .

11. **NEW CALL IND.** is displayed, press . Enable/disable the LED indicator for new calls. Select **ON/OFF**, and confirm with .
12. Buttons **1** and **2** can be programmed with service access numbers. **SERVICE ACCESS** is displayed, press . Use / to select **KEY 1** or **KEY 2**, and then press . Use the keypad to edit/enter the access number. Press . Enter the name for the service. Press .

Changing the clock, language or contrast

If you wish to change the settings for time or language etc. later on, repeat steps as above.

Batteries

4 x AA alkaline batteries are needed for the display operation (no back-light) in the event of a power cut. Extra amplification (boost) and speaker-phone will not work in the event of a power cut.

When  is displayed, replace all 4 batteries. Use only good quality batteries.

1. Unplug the telephone cord and remove the battery cover.
2. Insert the batteries (4 x AA) ensuring that the correct battery polarity is observed.
3. Replace the battery cover and connect the telephone cord.

Wall mounting


The telephone can be wall mounted by using the included wall mount bracket and two screws.




WARNING

Make sure that no cables, water pipes or gas pipes are located inside the wall before drilling into it.

1. Drill two holes in the wall, vertically 83 mm apart.
2. Insert the screws, allowing them to project ~5 mm out from the wall.
3. Unplug and remove the handset.
4. Fit the guide tabs (A) on the bracket into the slots (B) on the back of the telephone, then slide the bracket upwards until it snaps into place.

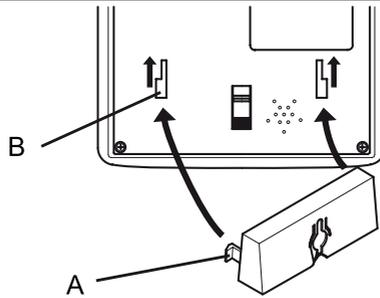

5. Position the phone so that the screws on the wall fit into the slots in the bracket, then slide the phone downwards until it is hanging on the screws.
6. Remove the handset hook (C) by pushing it upwards, and insert it in the reversed position so that the small tab (D) protrudes. The hook will now keep the handset in the cradle when the phone is wall mounted.

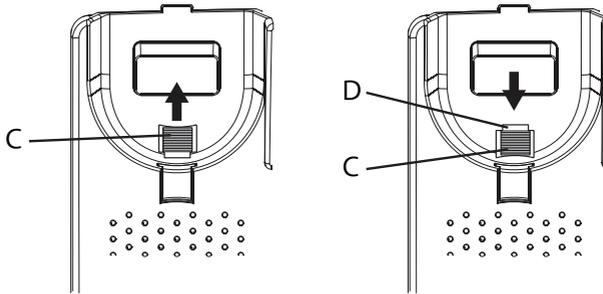

7. Replace the handset, on the hanging peg, in the hook switch.

Operation

The display

In standby mode the date and time is indicated on the display, the total number of calls that have been stored in the Caller ID memory, and the number of new calls. See also Message, p.8.

Timer

During a call the display shows a call timer, indicating the duration of the call. The timer is a simple way to help you keep track of how long the call lasts.

Make a call

Normal call

1. Lift the handset.
2. Enter the phone number.

Pre dial

Pre dial allows you to enter and change a phone number before it is dialled.

1. Enter the phone number. Delete with **C**.
2. Lift the handset to dial.

Re dial

Re dial allows you to call the last dialled phone numbers.

- Lift the handset and press  to dial the most recently dialled phone number.
- Repeatedly press  to scroll through the dialled numbers. Lift the handset to dial the phone number.

Handsfree/speakerphone

It is only possible for one person at a time to talk in handsfree mode. Avoid loud background noises, e.g. music, as this interferes with the handsfree function.

1. Press  to activate the handsfree function.
2. Enter the phone number.
3. Press  to end the call.

Tip: You can switch between handset and handsfree mode during a call, press  or lift the handset.

Service access dial

Shortcut keys to operator service access numbers.

1. Press and hold or **1** or **2** until the service access number is displayed.
2. Lift the handset, press  or  to dial.

Volume control

The handset volume may be adjusted during a call with  located under the handset when not used.

The handset tone may be adjusted during a call with  located on the side of the phone.

Note! The tone control only works when the extra amplification is active.

To adjust the speakerphone volume (handsfree), use  located on the side of the phone.

Extra amplification (boost)

Press the  button to activate amplification. When activated the **Amplifier on** light is lit. The amplification is deactivated at the end of each call to avoid harming people with normal hearing.



WARNING

The handset/headset volume can be turned up very loud. The amplification should only be used by people with impaired hearing ability.

Hearing aid compatible



WARNING

Do not use extra amplification (boost) together with a hearing aid if not necessary. The handset volume can be turned up very loud.

This telephone is hearing aid compatible. Select the **T-mode** on your hearing aid to use this feature. Hearing-aid compatibility is not a guarantee that a specific hearing aid will work with a specific telephone. To ensure that a specific hearing aid works well with this telephone, test them together before making a purchase.

T: To use your hearing aid in this mode, make sure that your hearing aid is set to "T-mode" or telecoil coupling mode (not all hearing aid have this mode). For the best results, try using the telephone in different positions relative to your hearing aid—for example, placing the receiver slightly below or in front of the ear may result in better performance.

Ringer

The ringer volume may be adjusted using the switch  located on the side of the phone.

Speed dial

You can use **A**, **B** as speed dials.

Storing speed dial numbers

1. Press and hold  until **STORE NUMBER** is displayed.
2. Enter the phone number. Press .
3. Enter the name. Press . **STORAGE PLACE?** is displayed.
4. Select **A** – **B** by pressing the corresponding key. **SAVED** is displayed

Speed dial

1. Press the speed dialling keys **A** and **B**. The stored phone number is displayed.
2. Lift the handset, press  or  to dial.

Phonebook

The phonebook will store 50 sets of names and phone numbers. Contacts in the phonebook are arranged alphabetically. Each name can be up to 16 characters in length, and phone numbers can be up to 22 digits in length.

If you subscribe to a Caller ID service, the name/number of the caller will be shown when you receive an incoming call (for those numbers stored in the phonebook or the memories).

Note! To access the phonebook features make sure that  is displayed. If  is displayed, press .

Character table

Each number key has been allocated certain characters.

1	[Space] + & - / X 1
2	A B C Å Ä Æ æ å ä ß 2

3	DEFë3
4	GHIï4
5	JKL5
6	MNOÑñÖəö6
7	PQRS7
8	TUV8Üü
9	WXYZ9
*	`@()*<>
0	,.:?=0
#	\$_%!#

Storing contacts

1. Press .
2. Press and hold  until **SAVE?** is displayed. Press .
3. Enter the phone number. Press .
4. Enter the name. Press the corresponding digit key for the first letter, one or more times, see [Character table](#).
5. Press . **SAVED** is displayed.

If you need to insert a pause in the phone number press . Mistakes can be erased with .

Dialing from the phonebook

1. Press .
2. Scroll using /. Quick search by pressing the corresponding digit key for the first letter, one or more times, see [Character table](#).
3. Press , and lift the handset.

Edit contacts

1. Press .
2. Scroll to the desired entry using /.
3. Press and hold  until **EDIT?** is displayed.
4. Press and hold .
5. Correct/change the number using  and /. Press .

- Correct/change the name, see Character table. Press . **SAVED** is displayed.

Deleting contacts

- Press .
- Scroll to the desired contact using /.
- Press **C** the display shows **DELETE?**.

Tip: To delete all contacts, press and hold **C** until **DELETE ALL?** is displayed.

- Hold **C** down until the number disappears.

Caller ID (caller identification)

Caller ID allows you to see who is calling before you answer a call and to see who has called in your absence. If the number is stored in the phone-book, the caller's name will be shown. Received calls are stored chronologically, the sequential number shown on the display.

When the Caller ID memory is full, the oldest number will be deleted automatically as the new call is logged. New calls are indicated on the display and indicated with , the New call indicator flashes.

Note! In order for numbers to be shown you must subscribe to the Caller ID service provided by your network operator. Contact your operator for more information.

Retrieving and dialling incoming numbers

- Press .
- Press / to scroll through received phone numbers/calls.
- Press and lift the handset.

Message

Apart from phone numbers, the display can show:

OUT OF AREA	No information received, e.g. an international call
PRIVATE	The call comes from a withheld number or a PBX
	Number not previously seen

	Several calls have been received from this particular person
	A call is received while using the Call Waiting function
MESSAGE WAIT- ING / 	Message indication*

*Message indication can be erased manually with **C**.

Deleting phone numbers

1. Scroll to the desired number using Δ/∇ .
2. Press **C**, **DELETE?** is displayed or press and hold **C** until **DELETE ALL?** is displayed.
3. Hold down **C** until the number disappears.

Transferring numbers to the phonebook

1. Press .
2. Scroll to the desired entry using Δ/∇ .
3. Press and hold \rightarrow until **COPY NUMBER?** is displayed.
4. Press and hold \rightarrow . **SAVED** is displayed.

Number and name can be added/edited in the same way as Edit contacts, p.7.

Other

Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment.

Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there the fault is probably with your telephone line. Please inform your network operator. If the telephone still does not work, contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Care and Maintenance



CAUTION

Only use batteries, mains adapter and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee. The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should disconnect it, remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice above applies to the unit, battery and other accessories. If the unit is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period. This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part.

Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the mains adapter during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

Declaration of Conformity

Doro hereby declares that Doro Magna 4000 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and

2011/65/EC (RoHS). A copy of the Declaration of Conformity is available at www.doro.com/dofc

English

Version 1.2

©2014 Doro AB. All rights reserved.

www.doro.com



REV 10824 – STR 20140115